 
 


1 Package content


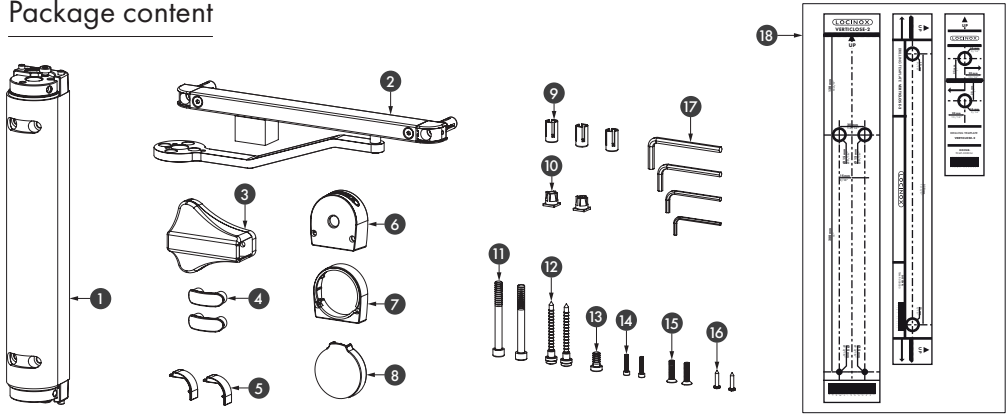


1	Verticlose-2	10	Quick-Fix Splitter
2	90° Arm	11	DIN 912 - M8x80
3	180° Arm Accessories	12	DIN 7504 - Ø 6,3x70
4	Verticlose-2 Cover	13	DIN 7984 - M8x16
5	90° Rail Cap Cover	14	DIN 912 - M4x20
6	Bottom Cap	15	DIN 7991 - M6x25
7	Top Cap	16	ISO 7049 - Ø 3,9x19 mm
8	Arm Cap	17	Allen keys Hex 3, 4, 5, 6 mm
9	Quick-Fix Expander	18	Drilling Templates


2 Mounting situation

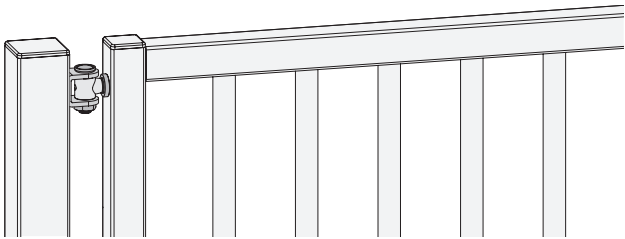


3 Add Drilling template

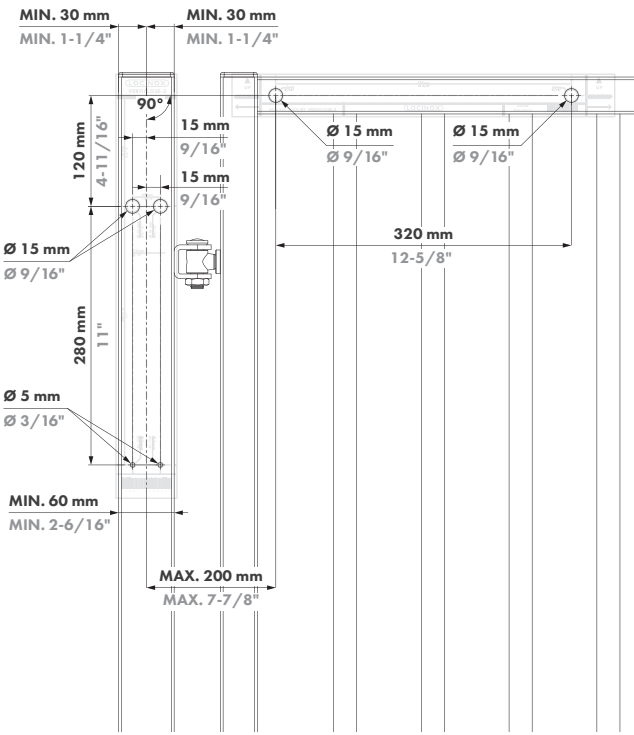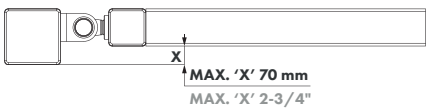



4 Install gate closer

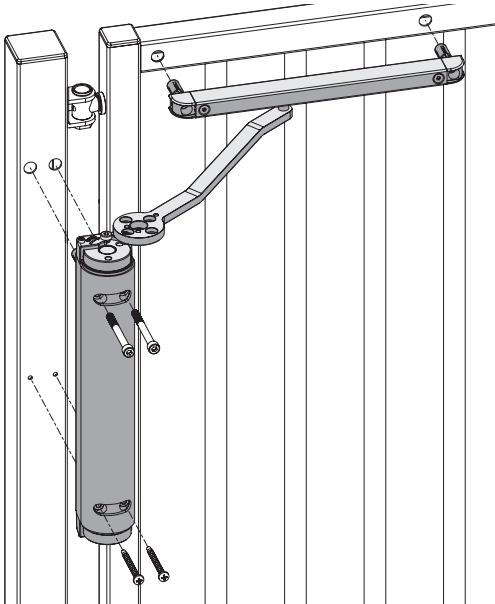


2 Mounting situation

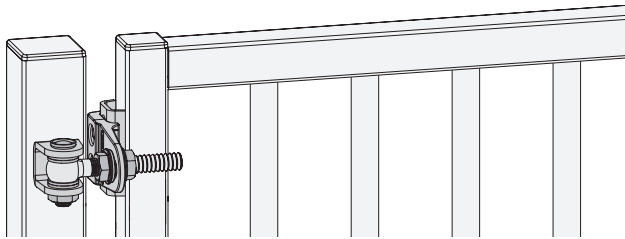

3 Add Drilling template

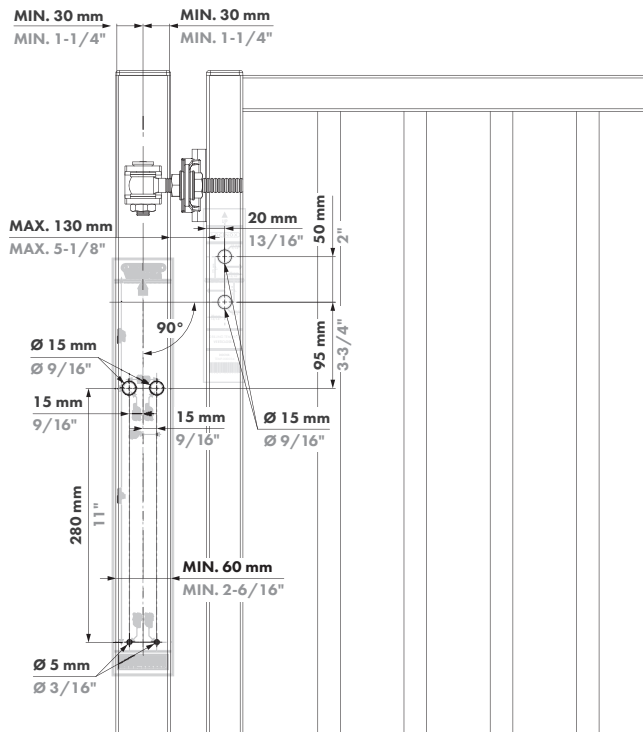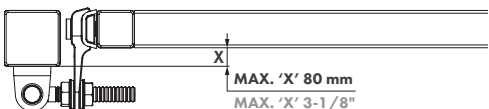


4 Install gate closer

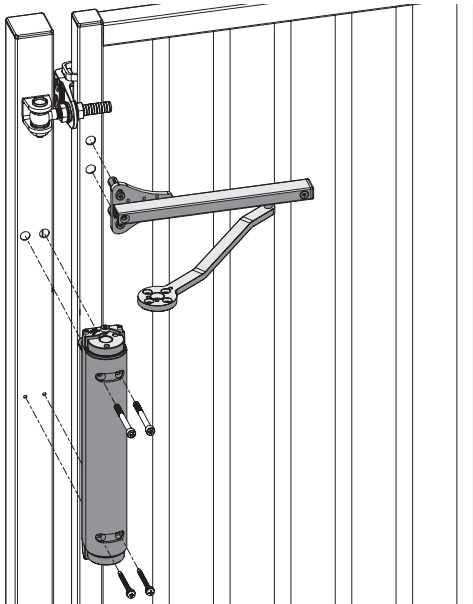


Wall situation


2 Mounting situation

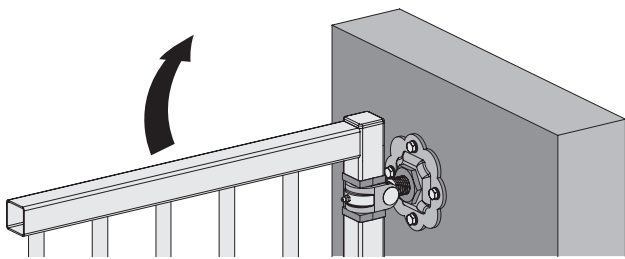

3 Add Drilling template

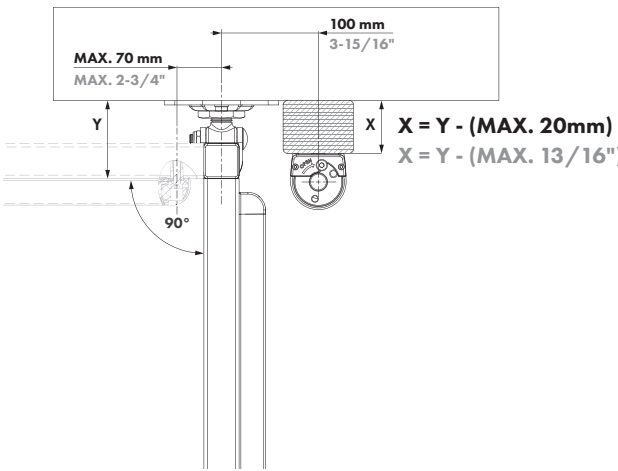


4 Install gate closer

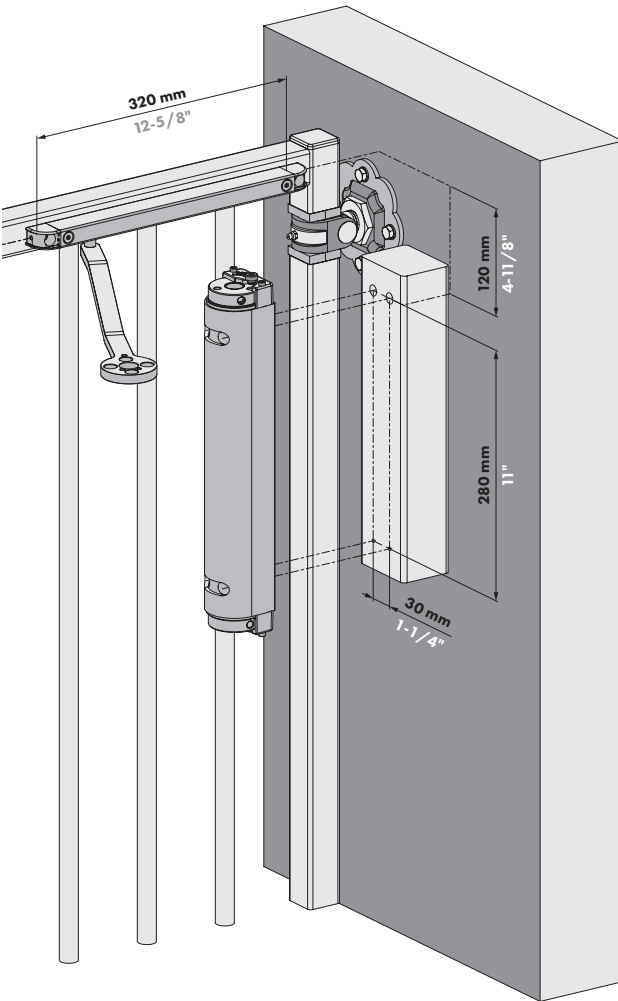

90°

5 Rail holder

HEX
3mm
5mm

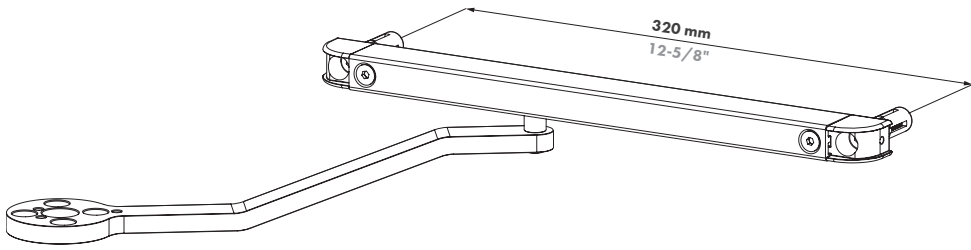


180°


5 Rail holder

A: Disassemble Rail holder 90°


HEX
3mm
5mm

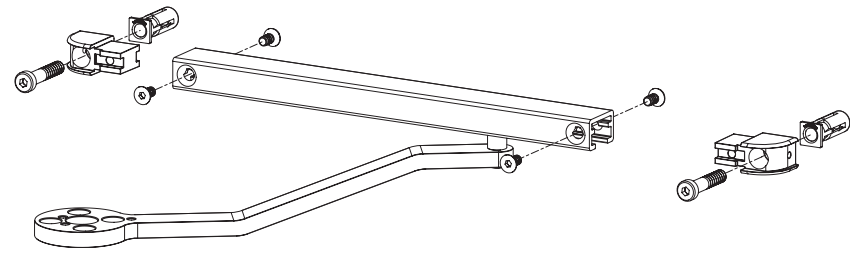

B: Disassemble 180° Rail holder

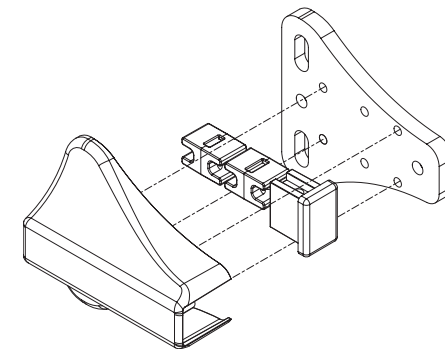


C: Install 180° Rail holder

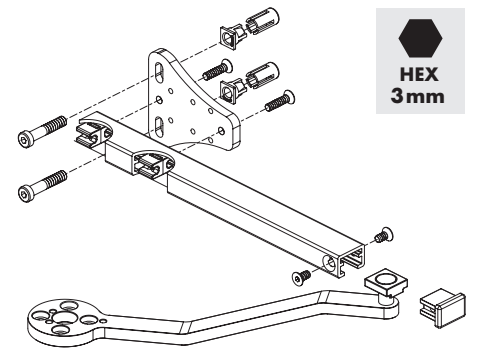

HEX
3mm

6 Left or right mounting

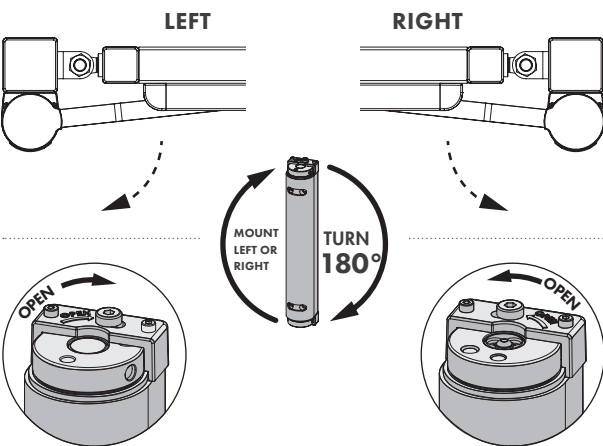


90° & 180°


7 Installing Arm

HEX
3mm
5mm


A: Remove tension block

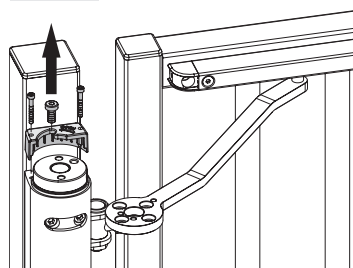


B: Place cap

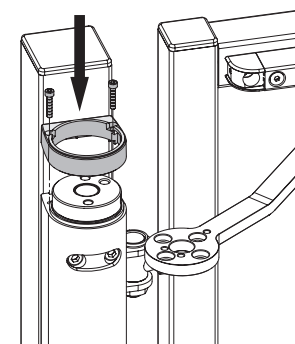

C: Position

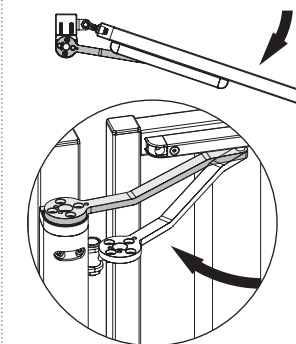


D: Fix


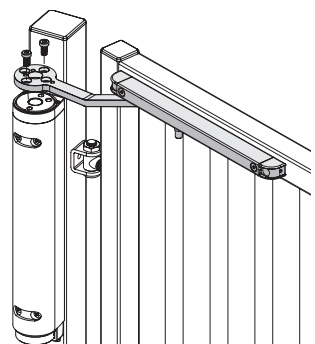


8 Remove pre-tension fixer

HEX
3mm
5mm


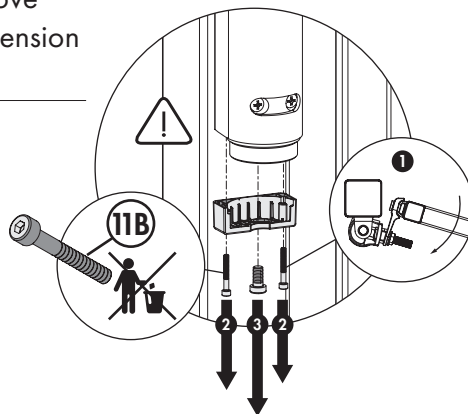


9 Adjust speed

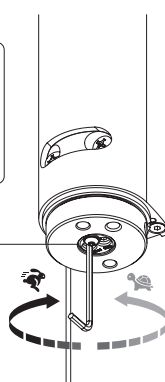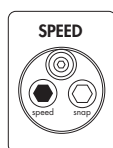

HEX
3mm

10 Adjust final snap

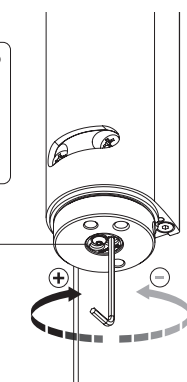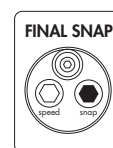



HEX
3mm

11 Finish installation

A: Add top caps and covers


B: Fix bottom cap

HEX
3mm

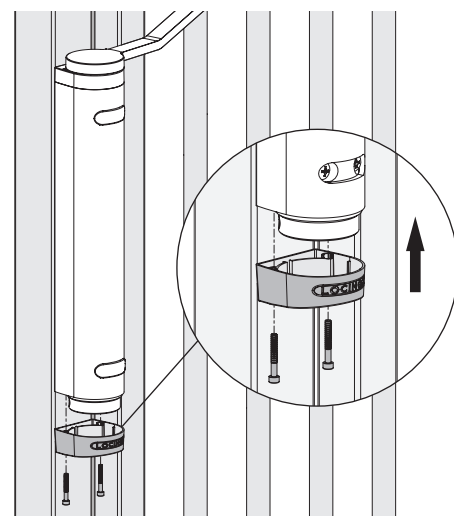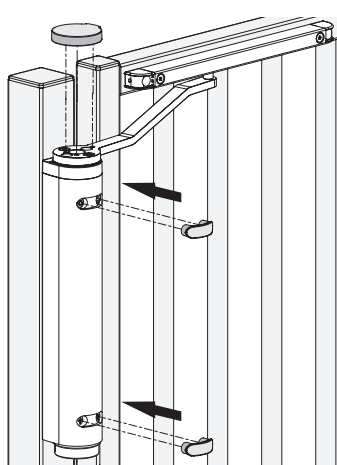


90°

12 Add rail cap covers

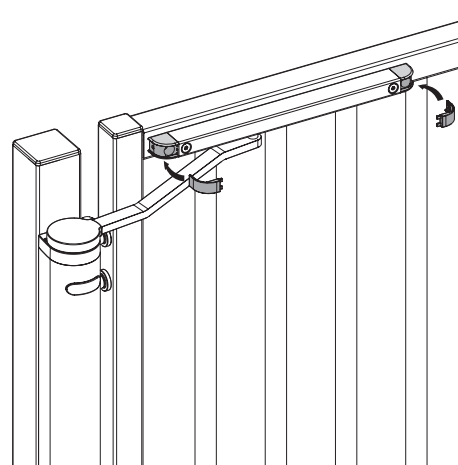

180°

12 Add rail cap covers

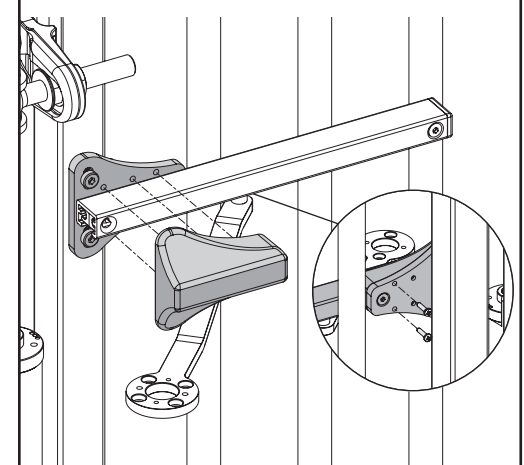

LOCINOX®
WWW.LOCINOX.COM

Doc. Nr.: MANU-000376

Locinox nv • Mannebeekstraat 21 • B-8790 Waregem • Belgium
Tel. +32 (0)56 77 27 66 • Fax. +32 (0)56 77 69 26 • E-mail: info@locinox.com



* M A N U - 0 0 0 3 7 6